


智能蓝牙无屏防拆无线充电手表

User Guide

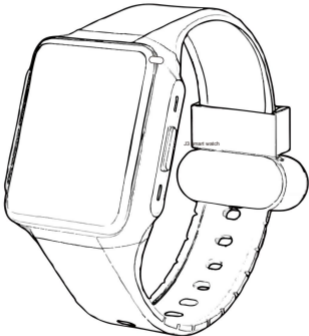

Thank you for choosing our product, please read the "User Guide" before use

package instruction

1. Smart watch

Three color LED lights



2. Lock




3. Lock picker




4. Mobile wireless charger

Battery indicator light

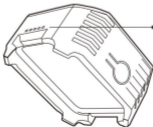

Mobile wireless charger

State 1: The mobile wireless charger is not charging:

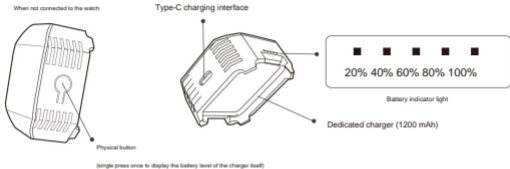

[Battery display status]

■	□	□	□	□	The battery level is lower than 20%. The first light flashes for 3 seconds and
■	□	□	□	□	the battery level is greater than 20%. The first light stays on for 3 seconds and the
■	■	□	□	□	battery level is greater than 40%. The first two lights stay on for 3 seconds and the
■	■	■	□	□	battery level is greater than 60%. The first three lights stay on for 3 seconds. The
■	■	■	■	□	battery capacity is greater than 80% per second, the first four lights stay on for 3
■	■	■	■	■	seconds to fully charge, and the five lights stay on for 3 seconds.

How to charge a smartwatch

State 2: Mobile wireless charger charges the watch:

Charging: 5 LEDs flash and charge in a marquee manner



The specific charging steps are as


follows: 1. Align the bottom of the mobile wireless charger with the front of the watch and

snap it on. 2. After the charger is attached to the watch, press the side button to start


charging. 3. The five "charging indicator lights" are displayed in a revolving light, indicating that charging is in progress.

Note: This machine is powered by a built-in (non-removable) battery, and the smart watch needs to be charged for 4 hours to be fully charged.


Check battery level

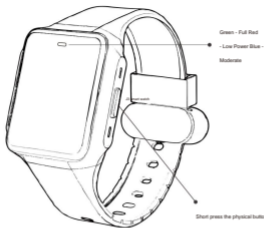


SOS one-click alarm

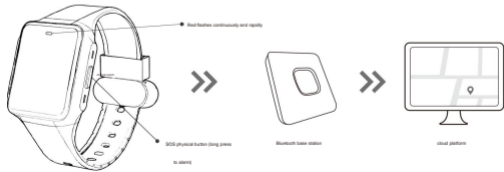

How to lock a watch strap

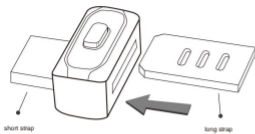


- 1 Align the long strap with the lock

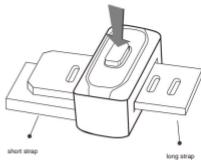


- 2 Press and hold the middle part of the button with your finger. Be careful not to press the button on one side.
When the button is pressed, the button surface is basically flush with the lock surface.

How to unlock

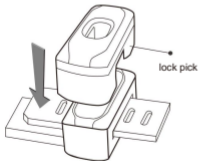

- 1 Align the bottom of the lock opener with the front of the lock

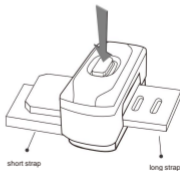

- 2 Press the middle button to unlock

smart watch features



注意事项

1. Do not drop or collide with hard objects, otherwise it may cause scratches on the surface of the machine, data loss or other hardware damage; 2.

Do not

attempt to disassemble or modify the machine, as this may cause quality problems or interfere with the product warranty; 3. Do

not use chemicals or cleaning reagents to clean the bracelet, as this will damage the surface of the machine and corrode the paint; 4. It is

prohibited to use an overloaded power supply for this product, and it is prohibited to bend or squeeze the power cord with heavy objects to avoid causing heat

and fire; 5. The watch battery is not removable, please do not remove the battery