# 智能NB防拆移动充电定位手表













 


Thank you for choosing our product, please read the "User Guide" before use

# 1. Smart watch 2.Lock 3. Lock picker 4. Mobile charger \_ charger switch

# Mobile charger

#### State 1: The mobile charger is not charging:



#### [Battery display status]

The bettery level is lower than 20%. The foot sight fashes to 2 accords and the field like is a second and a second and the field like is a second and a second and the field like is a second and a second and the field like is a second and a second and the field like is a second and a second and the field like is a second and a second and the field like is a second and t

State 2: Mobile charger charges the watch:





The specific charging steps are as follows: 1.

After checking the direction (the charging contacts of the bracelet are on the same side as the charger contacts),

 
Align the bottom of the mobile charger with the front of the watch and snep it in.

After the charger is attached to the watch, press the side button to start charging.

The five "charging indicator lights" are displayed in a revolving light, indicating that charging is in progress.

Note: This machine is powered by a built-in (non-removable) battery, and the smart watch needs to be charged for 4 hours to be fully charged.





Align the long strap with the lock

Press and half the middle part of the button with your longer. Be careful not to press the button on one side.


When the button is pressed, the button surface is basically flush with the lock surface.





1 Align the bottom of the lock opener with the front of the lock




 
2 Press the middle button to unlock

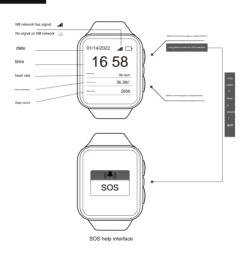

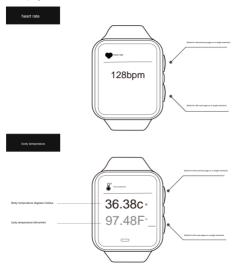

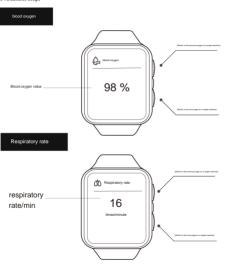

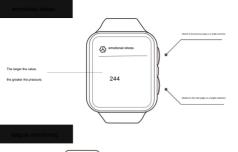




## MAC address


 
# SOS one-click alarm



### smart watch features



body temperature/body temperature



Blood oxygen SPO2



Respiratory rate



High-precision and ultra-low powe dynamic heart rate





NFC



Pressure value

SOS

# 注意事项

avoid causing heat and

 Do not drop or collide with hard objects, otherwise it may cause scratches on the surface of the machine, data loss or other hardware damage; 2. Do not

attempt to disassemble or modify the machine, as this may cause quality problems or interfere with the product warranty; 3. Do not use chemicals or cleaning reagents to clean the braceless, as this will dismage the values of the machine and contode the paint; 4. It is prohibited to bend or squeeze the power cost with heavy objects to or prohibited to bend or squeeze the power cost with heavy objects to

fire; 5. The watch battery is not removable, please do not remove the battery